


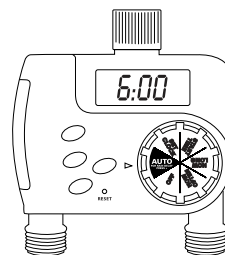

## DUAL-OUTLET DIGITAL TIMER

### PROGRAMMING FOR THE DIGITAL OUTLET OF THE TIMER



### INSTALLING THE BATTERIES

- Remove the tray on the back of the timer by sliding it out.
- Insert two AA (1.5V) alkaline batteries (not included) and replace the tray.
- Replace batteries when low battery icon appears.

### INSTALLATION

- Attach timer to an outdoor hose faucet and turn on after programming.

### PROGRAMMING THE TIMER

- Rotate the dial to positions indicated or setup.
- Press station button to switch between station 1 and 2 for all programming.

### SET CLOCK

- Press the + button to advance clock time (hold button for quick advance).
- Press the – button to reverse clock time (hold button for quick reverse).

### START TIME

- Press the + button to advance start time (hold button for quick advance).
- Press the – button to reverse start time (hold button for quick reverse).

### HOW LONG

Set watering duration from 1 to 240 minutes using the + and – buttons.

### HOW OFTEN

Set watering frequency as every 6 hrs, 12 hrs, or from 1 to 7 days using the + and – buttons. 1 is every day, 2 is every other day etc. up to 7 days.

### AUTO

Timer waters according to programmed time, station, duration, and frequency.

### RAIN DELAY

- When in **AUTO**, press + button for 24 hrs, 48 hrs, or 72 hrs.
- Screen will flash between clock and hours remaining before programmed cycle resumes.
- To remove rain delay, turn dial to **OFF** and then back to **AUTO**.

### MANUAL/HAND WATERING

To water without interrupting the set cycle, press [MANUAL] button and then use + and – buttons to set from 1 to 240 minutes.

- To remove manual watering (turn off), turn dial to **OFF**.
- To resume programmed cycle turn the dial back to **AUTO**.

### TROUBLESHOOTING

**Water does not come on at desired time.**

**Check if:**

- Clock is set to correct time including AM and PM
- Start time is set to desired time including AM and PM
- Rain Delay is on

**Timer does not water.**

**Check if:**

- Timer is set to **AUTO**
- Hose faucet is on
- Batteries are low
- Clock is set to correct time including AM and PM
- Rain Delay is on

**Water won't turn off.**

**Check if:**

- Watering duration is set to desired time
- Start times begin after previous watering cycle has run through all stations and set durations



CUSTOMER SERVICE  
1-800-488-6156  
www.orbitonline.com

Orbit® Irrigation Products, Inc.  
North Salt Lake, UT 84054  
1-800-488-6156  
www.orbitonline.com

© 2009 Orbit Irrigation Products, Inc. All rights reserved. All trade names are registered trademarks of respective manufacturers listed.

PN 27133-24 rA